## ILS Presentation Systems Better for presenters, better for the audience



Diepmaat 16, NL-9431MP Westerbork The Netherlands, info@intelligentlecterns.com www.intelligentlecterns.com

## Installing the new ILS pedestal.

The ILS pedestal places ILS22, ILS21, ILS15 or other VESA mountable displays on an electrically height-adjustable foot. There are 5 parts in the pedestal that are need to be put together with the cables that are selected by the customer for support of the specific lectern display.


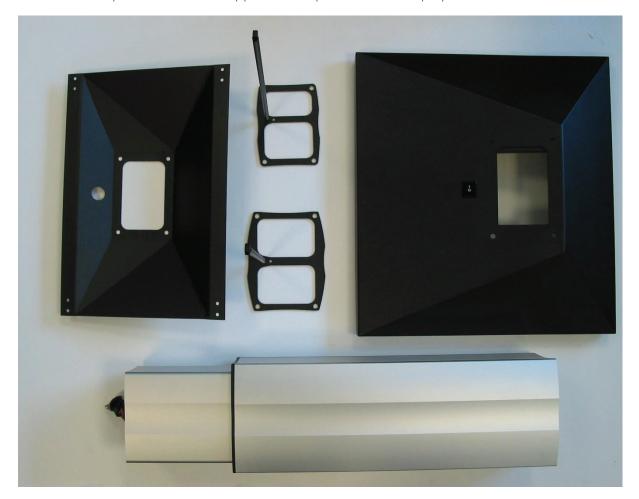


Figure 1. The pedestal components for the ILS22GL

Clockwise: The top support plate, 2 cable guides, 1 floor module, 1 Powerlift pillar.


The 2 cable guides have a long steel rod on a frame with the exact appearance of the top and the bottom part of the pillar, these will go with the pin sticking inside on the top between pillar and top support plate and the bottom one will go with its pin past the motor in the bottom and fits between the bottom of the pillar and the floor plate. M8 screws hold the system together.

To accommodate for the wide range of height adjustment, the cables are managed in an S-curve that is almost straight when the pillar is at top height, allowing for at least 30 cm of cable margin on the top to plug into the ILS22 I/O bay. See figure 2. The picture is for clarity, now first put all needed cables from the bottom end through the pillar so that they appear at the top

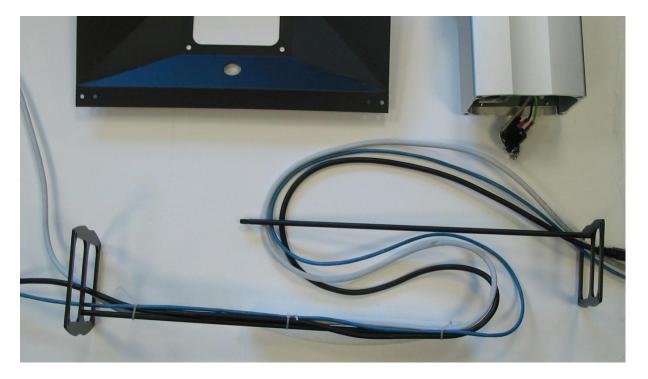

## Figure 2.


Now tie the cables together on the top rod of the cable managers, include a tie wrap through the eye, and insert this into the top of the pillar (while still in its low position). You may loosely put screws in to hold this in place. Once completed, temporarily apply power to the pillar. Short on the DIN socket (see figure 3) the pins 1 and 2 to make the pillar come out all the way, this will tell you how long the cables must be inside.

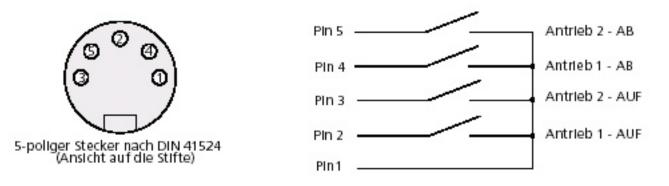

Then shorten 1 and 4, to make the pillar go to its lowest point.

Now that you know the length of the cables, tie the cables to the bottom cable manager and insert this inside the pillar. Now you can mount the pillar on the foot. And fasten the bolts tightly.

Put the pedestal on its foot and mount the top support pillar. You now have all the cables come out to fit the ILS22GL top. Put a box or a few books under one side of the foot such that the top plane of the support plate is horizontal, this will make it easier to mount the top with the 8 M4 screws. First attach the audience side very loosely. Then connect all the cables, then fixate all screws.

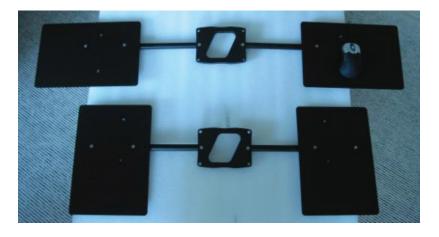

If you have included the option for one or two side tables, you must include both weights in the foot. The side tablets can be mounted either in a wide (top sample in the picture) or in a portrait format. And closer to the center or more removed from it. For the ILS22 it will be further out. Choose the appropriate screw holes and make sure the bars and tablets are properly chosen to keep a level tablet when the pillar is at a 12° angle. Once the tablets are fixed the tablet center piece fits on top of the top cable guide and under the top support plate of the ILS22.

Via the hole in the top plate a mouse is connected internally in the ILS22 I/O bay and can be used either on the left or on the right side. The A4 size tablets may support larger tablets or a single U-shape tablet that goes around the ILS22 head on the presenter side.

Mounting other ILS lecterns and displays.

The ILS21R is mounted directly on the pillar's top cable guide without a support plate, however the tablets will fit in the wider configuration. The ILS12 has a special tilt/VESA mount head that can sit on top of the upper cable guide, with the tablet option in between.





Open the top VESA cover and mount the 4 positions needed for the display, manage the connecting cables through the opening on the presenter side after including the display power supply in this head.

Choose the appropriate tilt level, the angles once installed on the foot are 12°, 18° or 24° (this includes the angle of 12° of the pillar on the floor plate!) Then tighten the screws in that locked position.