




# ILS11A mini-height-adjustable lectern

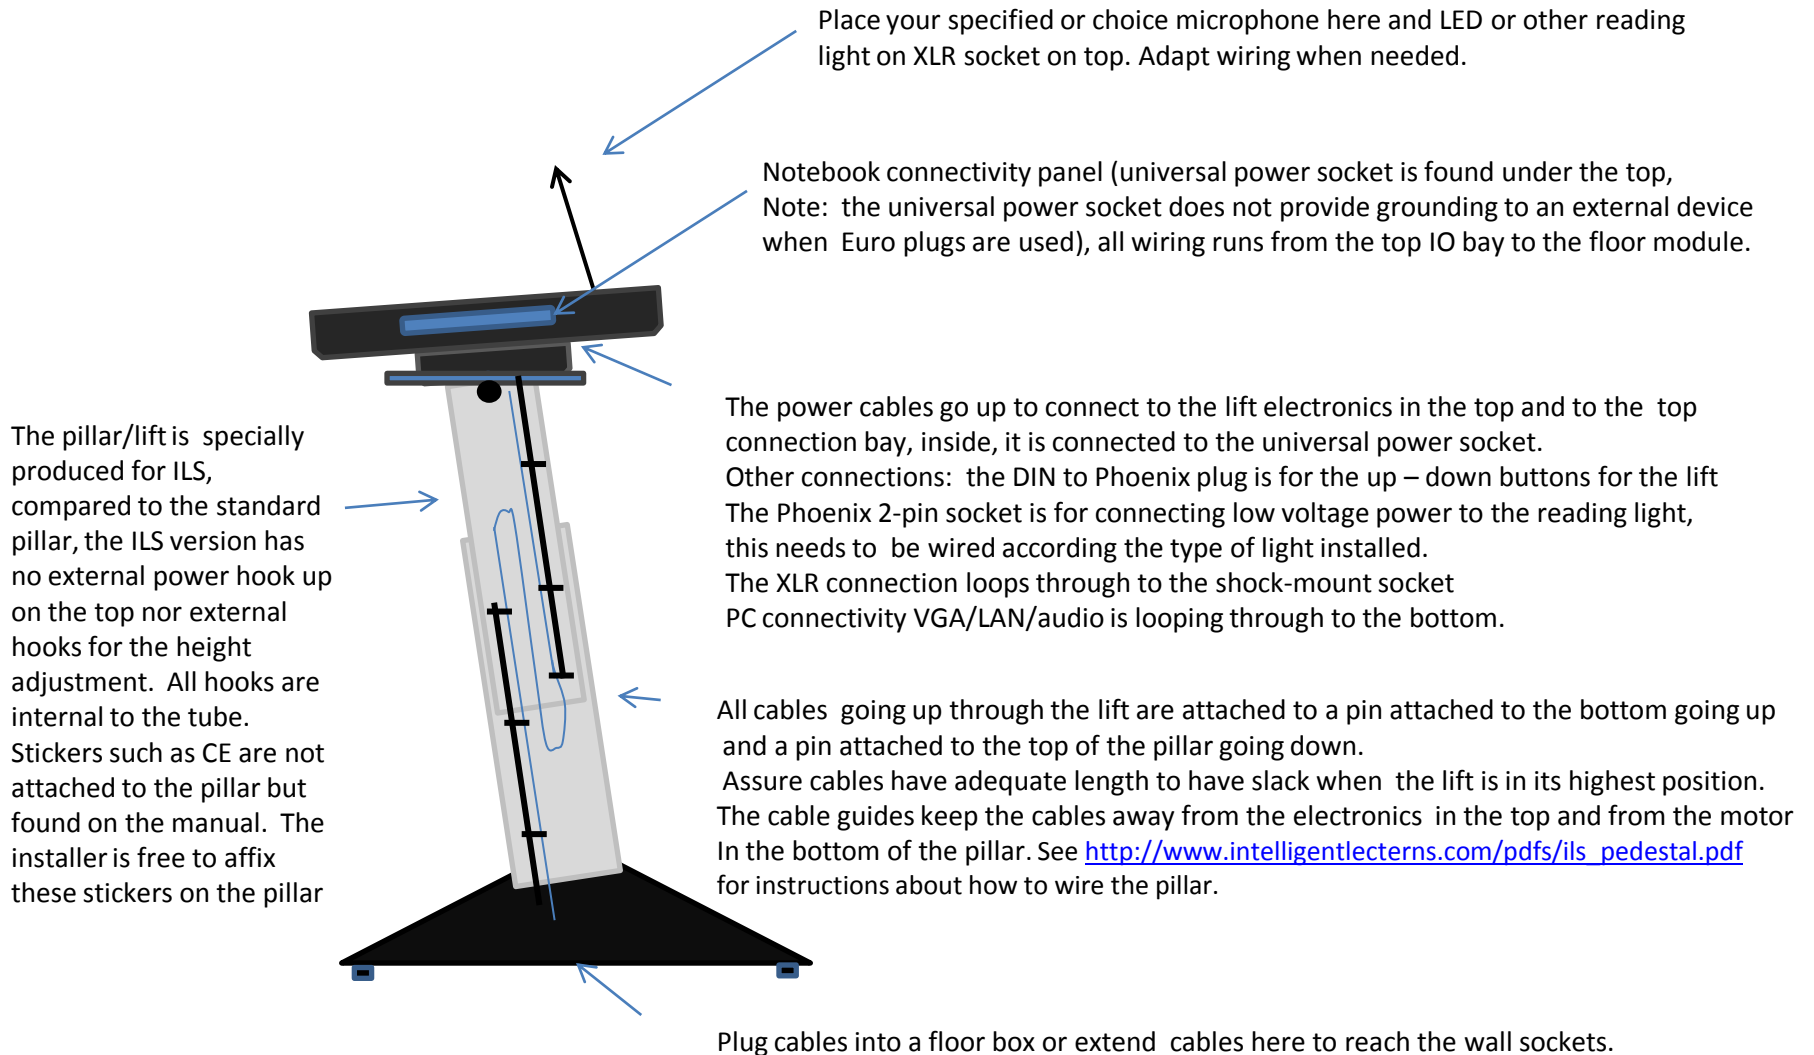

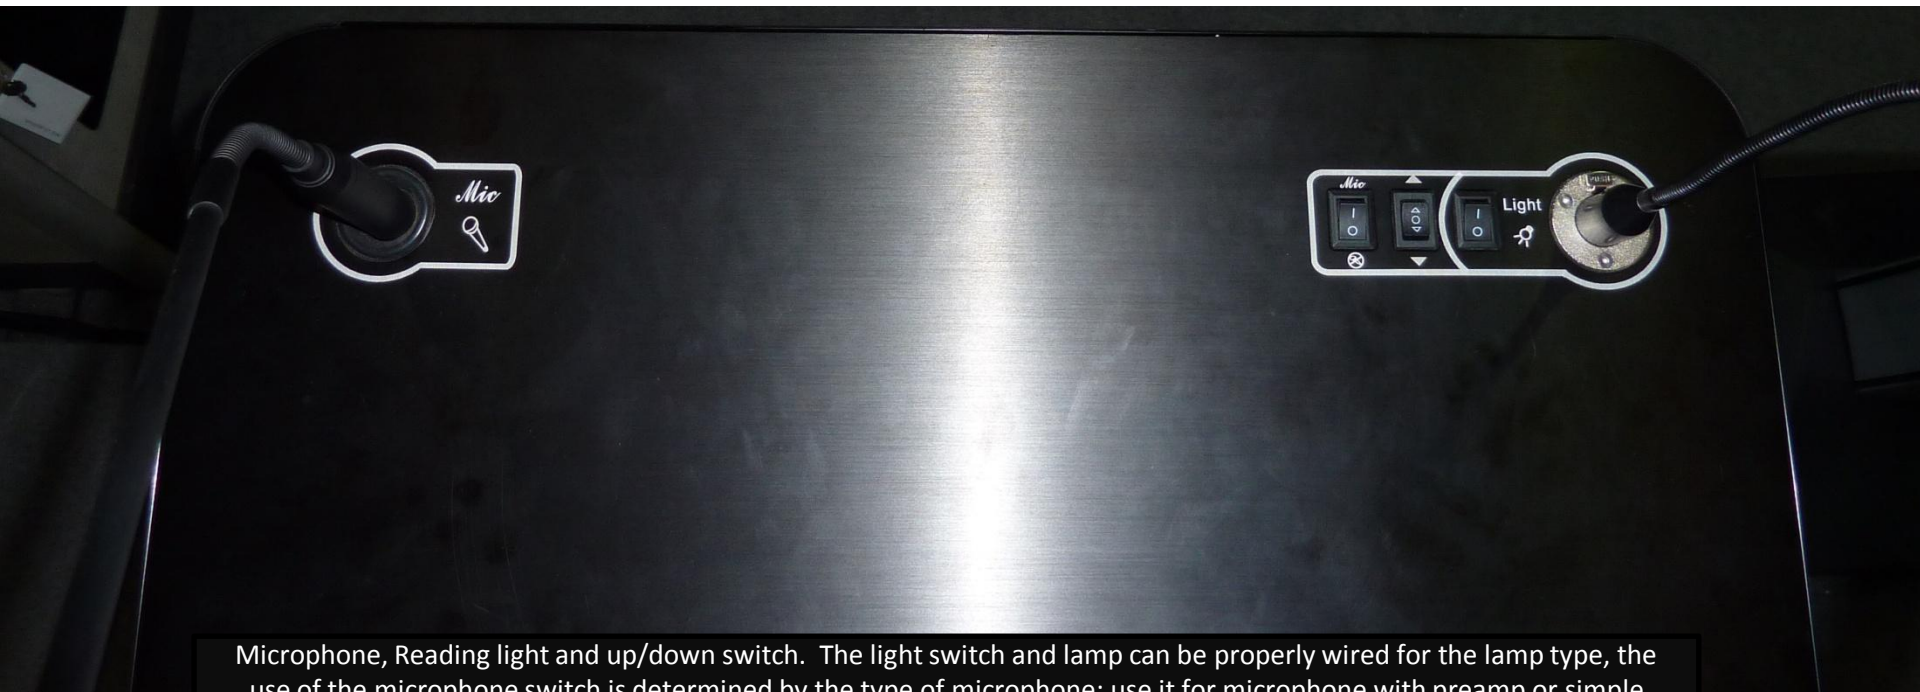

Microphone, Reading light and up/down switch. The light switch and lamp can be properly wired for the lamp type, the use of the microphone switch is determined by the type of microphone; use it for microphone with preamp or simple microphone, condenser cartridge microphones are not recommended to use this to avoid the dunk-noise when switching!

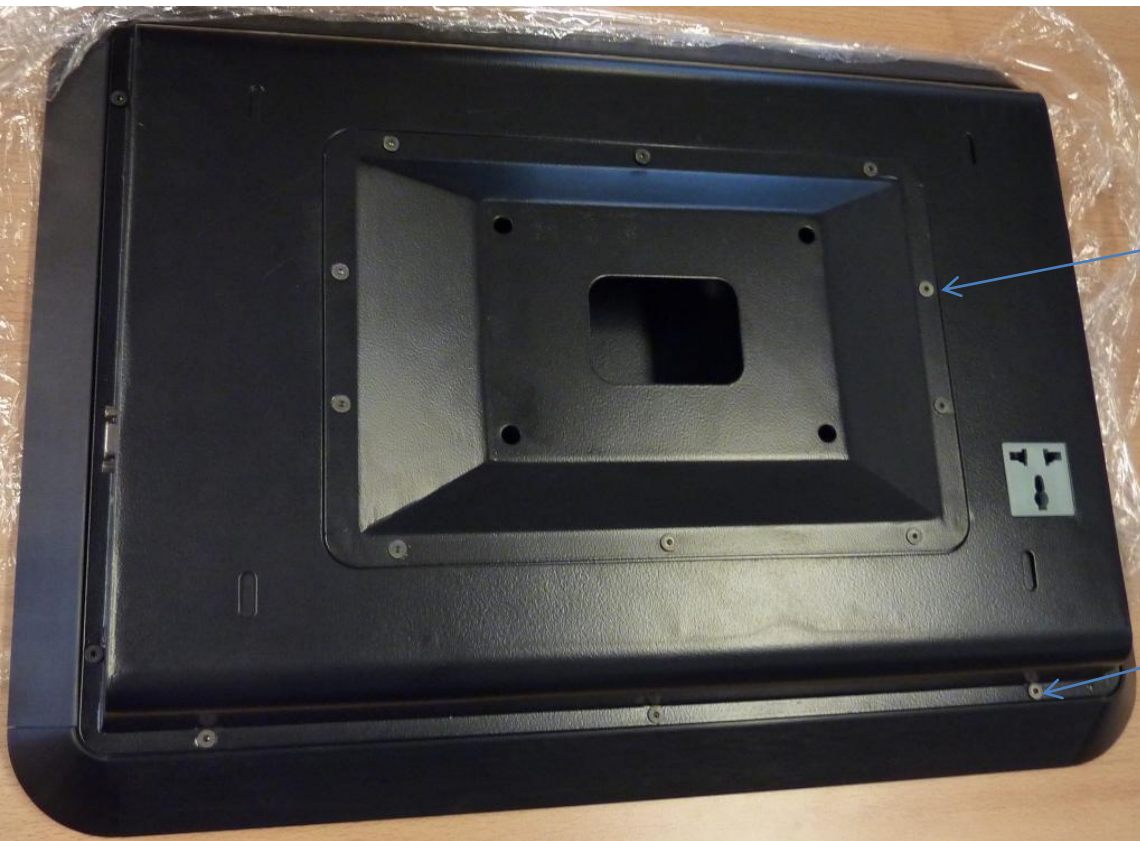

Remove these screws and remove this fitted panel, Mount it on the pillar [with its cross bar for the Side tables), later you can attach this housing after connecting all cables.

Remove these screws and remove the top of the housing carefully when you wish to change the reading light or microphone wiring.